



BAND SWITCH SHOWN IN BC POSITION

ELCO "World Wave"

Component list

C1	20uF elec	R1	220 Ω	
C2	22uF elec	R2	42 Ω ww	
C3		R3	250K	
C4		R4	10M	
C5		R5	1M	
C6		R6	1M	
C7	50pF	R7	50K	
C8		R8	10K	
C9	100pF	R9	25K	
C10	100pF	R10	47K	
C11	0.047uF			
C12	100pF	L1a	1.2 Ω	ant SW
C13		L1b	0.4 Ω	ant SW
C14		L2a	15 Ω	ant BC
C15	tuning cap	L2b	3 Ω	ant BC
C16	padder	L3a	0.3 Ω	osc SW
C17-20	trimmers	L3b		osc SW
C21		L4a	1.9 Ω	osc BC
C22		L4b	2.1 Ω	osc BC
C23	0.047F			
		Field coil	1180 Ω	





CND. ANT.

CAUTION
NO INTERNAL PARTS SHALL BE
TOUCHED UNTIL THE SET HAS
BEEN DISCONNECTED FROM
THE SUPPLY BY THE
WITHDRAWAL OF THE PLUG
OR ADAPTOR FROM THE WALL SOCKET



BC.

SW.

1500
1400
1300
1200
1100
1000
950
900
850
800
750
700
650
600
550

3AY
4BH
4BK
2NC
2UW
3DB
2UE
2CY
3LO
2BL
2NR
2CO
4QN
2CR

4XD
2XP
1XH
1YD
2XA
3XC
2YD
3ZB
1ZB
4ZB
2XG
2ZB
2ZA
3YZ
4YC
1YC
2YZ
1YZ
4YA
1YA
4YZ
3YA
2YC
2YA

MC
18
17
16
15
14
13
12
11
10
9
8
7
6

16 METRE BAND
19 METRE BAND
25 METRE BAND
31 METRE BAND
41 METRE BAND
49 METRE BAND



