

For Philips Service Dealers only

Copyright

THE CENTRAL SERVICE DIVISION N.V. Philips' Gloetlempenfebrie

# **PHILIPS**

# SERVICE NOTES

for the 20 W Amplifier illiittiittiittiittiitti

**EL6400** 

With the Compliments of ... RADIO WHOLESALERS LTD. P.O. Box 527 INVERCARGILL

1953

### GENERAL

This amplifier has been designed for public address purposes. It is provided with four input channels, viz. 2 for microphone, 1 for gramophone and 1 for radio.

## VERSIONS

EL 6400/00 Standard EL 6400/01 Tropic-proof EL 6400/06 Extra VL2 in HT.

#### WEIGHT

Complete with valves 8.9 kg

#### DIMENSIONS

Length: 335 mm Width: 245 mm Height: 190 mm

#### LIST OF DIAGRAMS

Fig. 1 Circuit diagram

Fig. 2 Top view of amplifier

Fig. 3 Bottom view of amplifier

a)

Fig.4b)Frequency response curves

Fig. 5 Distortion characteristic Fig. 6 Measuring circuit

Fig. 7 Transformer connections

#### ELECTRICAL DATA

	mic. 1 and 2	P.U. input	radio input
Impedance	10 MΩ	230,000 Ω	230,000 Ω
Sensitivity	6.5 mV	172 mV	172 mV
Noise level	-55 dB	-65 dB	-65 dB

# DISTORTION (fig.5)

			6000		V 5 %	
--	--	--	------	--	-------	--

## POWER CONSUMPTION

no signal	41 watts	cos	4	0.84
maximum signal	79 watts	cos	9	0.90

## OUTPUT VOLTAGES

By means of a voltage adaptor the following output voltages can be obtained: 10V, 25V, 35V, 50V, 70V, 100V (see also under "loudspeaker matching").

## MAINS VOLTAGES AND FREQUENCIES

This amplifier is suitable for mains voltages of: 110, 125, 145, 200, 220 and 245 volts with frequencies from 40 to 100 c/s.

## VALVES, etc

3	Pre-amplifying valves	EF40
1	Phase inverting valve	ECC81
2	Output valves	EL81
1	Indicator lamp	8008N
1	Fuse (110 - 145 V)	08 140 39.3
1	Fuse (200 - 245 V)	08 118 40,0

# CONNECTIONS (fig.2)

At the rear of the amplifier, from left to right, are the following connections:

a. Mains input
This is a recessed male socket with 6 mm pins.

b. Loudspeaker output
This is a special 2-pole socket into which a 13 mm plug with flat pins
fits.

c. Radio input Female socket

d. Earth terminal

e. Gramophone input Female socket f. Mic 3-r

g. <u>Mic</u>

1. Fem
The

sid is

2. Fer

3. <u>Ma</u> Th

**B1** 

CONTR

the f

a. Vo

b. Vo

1

¢.

d. 1

AOT

(it

- f. Microphone input, channel 2 3-pin male socket
- g. Microphone input, channel 1 3-pin male socket

The pins of the input sockets have the following functions:

1. Female socket "R" (radio)

The radio input socket takes a 19 mm plug with a flat middle pin. The left-hand contact (viewed from the back of the amplifier) is the "hot" side of the input (contact grid valve 33) and its impedance above earth is 230,000 Ω. The right-hand contact is earthed.

2. Female socket "Q"(pick-up)

See under female socket "R". This input is suitable for the connecting of a crystal pick-up.

3. Male sockets (microphone) " C

The pin designated "1" is the "hot" side of the input (control grid B1 and B2) and the input impedance is 10 MΩ. Pins 2 and 3 are earthed.

#### CONTROL KNOBS

Located along the front of the amplifier, from left to right are the following controls:

- a. Volume control with zero in the middle To the left the volume of microphone input 1 is adjusted. To the right, the volume of the pick-up is adjusted.
- b. Volume control with zero in the middle To the left, the volume for microphone input 2 is adjusted; to the right the volume for radio input.

It is thus possible to mix:

- 1. Microphone 1 and microphone 2
- 2. Microphone 1 and radio
- 3. Microphone 2 and pick-up
- 4. Pick-up and radio

with this control turned fully counter-clockwise the response at 10,000 c/s is down approx. 18 dB. With this control turned fully clockwise the response curve is flat.

d. Mains switch

In position "O" the amplifier is switched off and in position "1" the amplifier is switched on. An indicator lamp which lights up when the amplifier is on, is located next to the mains switch.

#### VOLTAGE ADAPTORS

Two voltage adaptors for the output voltage and the mains voltage (items 13 and 14, fig.2) are fitted inside the amplifier. To adjust these adaptors it is necessary to remove the screening cover from the amplifier.

es can

g").

100 c/s.

follow-

pins

# CIRCUIT ARRANGEMENT (fig. 1)

The microphone inputs 1 and 2 are connected via the isolating capacitors C1 and C2 and the resistors R6 and R7 to the control grids of the valves B1 and B2 respectively (type EF40). The negative grid bias for B1 and B2 is obtained by using grid leak resistors (R4 and R5) of a high value (10 M $\Omega$ ).

The amplified microphone voltages are coupled via C3 and C4 to the volume controls R1 and R2. These potentiometers have a centre tapping which is connected to earth. The moving contacts of the potentiometers are 6400/00 connected via R10 and R11 and C6 to the control grid of B3 (EF40). R10 and maxim R11 have been connected in series with the moving contacts in order to prevent the signals from these potentiometers from affecting each other.

When the treble control (potentiometer R3) is turned to its minimufter this position, C5 is between the junction of R10-C6 and earth. The impedance which C5 offers to the high audio frequencies is low compared to its im- scillator pedance at the middle and low frequencies. As a result, the high frequenciolume con are attenuated more than the middle and low frequencies ( $\pm$  18 dB). See fig.4B).

The anode of B3 is connected via C7 to the control grid of the phase-inverter (ECC81). Since the resistors R16 and R19 are of the same value and the same current flows through them, equal voltages which are opposite in phase will be developed across them. These voltages are applie to the control grids of the output valves B5 and B6.

The grids of B5 and B6 receive their negative bias via the resist R24 and R25. This voltage is derived from the circuit S4-B7-R31. The dicde GR2 functions as a rectifier, R27 presents a constant load, and C16 is the smoothing capacitor. S3, on the secondary side of the output transformer provides inverse feedback via R21 to the cathode of B4. This arrangement gives an inverse feedback of 22 times.

Between both anodes of the output valves is a spark gap which is adjusted to 0.6 mm and sealed in the factory. This adjustment must not be altered. In this amplifier the anode voltage is supplied by a selenium rectifier (Gr1).

# CHECKS AND MEASURFMENTS

# Valve voltages and currents

Output voltage adaptor set to 100 V. Volume control turned to "O" connecti (except for cutput valve measurements at maximum signal). Amplifier output loaded with a 500 & resistor (10 - 20 W).

					-
	Valve B1,B2, B3, EF40	B4, ECC81	B5,B6 EL 81 no signal	B5, B6, EL81 full signal (Vo 100 V- 1000 c/s	La' 80081
Va Ia Vg2 Ig2 Va' Ia' -Vg Vf Vk to earth	45 -59 0.9 - 1.15 45 -49 0.16- 0.24 - - 6.15- 6.45	35 - 49 0.9 - 1.15 - 131 - 165 0.88- 1.07 - 6.15- 6.45 38 - 52	140-149 0.3-0.6	250-268 60- 84 125-135 5- 10 - -23.424.6 6.1- 6.4	5.4-5

value fier ca ch sta 701tm da or

TIRING T

icrophone he voltage eter is 20

-J .-K-K .F. oscil

Point

À A 8 B

B C CI D

E

FREQUENCY

(10 - 20)

Set the the same

isolating ol grids of rid bias for of a high

and C4 to

The figures listed on page 4 represent extreme values, and the values measured must fall within these limits. When a fault in the ifier cannot be located with the aid of the table on page 4, the gain ch stage in the amplifier should be checked. For this purpose, use a voltmeter e.g. type GM 4132 or GM 6005 and an A.F. oscillator e.g. or GM 2307.

#### WRING THE STAGE GAIN

Connect a 500 0 resistor (10 - 20 W) across the output of the tre tapping order to

iometers are 6400/00 and set the voltage adaptor to 100 V. Turn the volume control 40). R10 and to maximum. Feed a 1000 c/s signal from the A.F. oscillator to the icrophone input "C1". Adjust the strength of this input signal so that ach other. he voltage across the 500 Q load resistor measured with the valve volteter is 20 V. This should correspond to an input voltage of + 1,3 mV. o its minimufter this, the valve voltmeter is connected to the points B-C-D-E-F-G-Himpedance -J'-K-K' and L in turn (fig.1). To measure at points B' and C', the A.F. to its im- scillator has to be connected to the microphone input "C 2" (A'). The gh frequencialume control R1 is turned to minimum and the volume control R2 to maximum.

dB). See .F. oscillator set to 1000 c/s.

id of	the
the s	
which	are
s are	applie
a the	resist
	dicde
	is the
ransfo	rmer

Point	Voltage
A	1.3 mV 1.3 mV
A' B	0.8 mV
B'	0.8 mV 35 mV
C *	35 mV 7 mV
E	0.32 V

Point	Voltage
F	0-31 V
G	5.5 ₹
H	5.5 V
J	3.7 ₹
J'	3.7 ¥
K	29 <b>V</b>
K'	29 <b>V</b>
L	20 V

p which is ust not be elenium

rangement

#### FREQUENCY RESPONSE MEASUREMENTS

Set the output voltage adaptor to 100 V. Connect a 500 Ω resistor (10 - 20 W) across the output of the amplifier.

Turn the volume control of the channel to be measured to maximum. Set the other volume control to minimum. The measuring instruments are the same as those mentioned under "Measuring the stage gain". For their rned to "O" connection see fig.6.

fier output	Channel	Q flat	Ø −н	G1,G2 flat	R flat
81 La' nal 80081 V- c/s	40 c/s 60 c/s 120 c/s 250 c/s	-2.5 db -1.5 db -0.4 db -0.3 db	- - +2 db	-5.2 db -2.5 db -1 db -0.3 db	-2.5 db -1.5 db -0.4 db -0.3 db
4.6	500 c/s 1000 c/s 2000 c/s 4000 c/s 6000 c/s 8000 c/s 10,000 c/s	0 db 0 db 0 db -0.3 db -0.4 db -1 db -1.2 db	+1.6 db 0 db -3.5 db -8.5 db -11.5 db -14.2 db -16.5 db	0 db 0 db 0 db -0.3 db -0.4 db -1 db -1.5 db	0 db 0 db 0 db -0.3 db -0.4 db -0.4 db

## IMPORTANT

When measuring via the two microphone channels or via the pick-up channel, a 12.000  $\Omega$  resistor has to be inserted in series with the measuring lead.

4

9

10

11

12 13

14

15

16

17

19

23

Fig. 4A gives the frequency curve for the microphone channel Fig. 4B gives the frequency curve for the gramophone channel Fig. 4C gives the frequency curve for the radio channel

# LOUDSPEAKER MATCHING

The secondary winding of the output transformer is designed in accordance with the 100 V system. The output voltage adaptor is adjustable for 100, 70, 50, 35, 25 and 10 V. This range is so chosen that, when the output voltage is lowered by 1 step, the nominal loudspeaker power can be doubled. The reduction in sound intensity is then 3 db.

It is possible to connect a loudspeaker having a 100 V transformer, in which case the impedance of the loudspeaker voice coil is of no importance. Moreover, several loudspeakers can be connected to the amplifier provided the total power of the loudspeakers does not amount to more than 20 watts.

If the loudspeaker is connected to an output voltage that is lower than the voltage for which the speaker is intended, the speaker will consume less power, so that under these conditions more than one loudspeaker can be connected.

When the type 9844 loudspeaker, which has a power rating of 6 watts, is connected to the 100 V output of the amplifier, the loudspeaker impedance can be computed as follows:

$$Z = \frac{e^2}{77} = \frac{10.000}{6} = 1670 \Omega$$

When the output voltage of the amplifier is set to 70 V the power applied to the loudspeaker is:

$$\frac{70^2}{1670}$$
 = 2.9 watts

The amplifier can deliver a power of 20 watts. So, in the above ca  $\frac{20}{2.9}$  = 7 loudspeakers can be connected.

With the output voltage adaptor set to 50V, 35V or 25V we find that 14, 28 or 56 type 9844 loudspeakers can be connected.

The 10 V tapping is used for feeding loudspeakers without transformer (voice coil connection) and for headphones.

The following table lists the various connection possibilities:

Voltage adaptor	Total nominal loudspeaker power	Number of loudspeakers
100 V 70 V 50 V 35 V 25 V	20 watts 40 watts 80 watts 160 watts	e.g. 3x9844 or 2x9840 6x9844 or 4x9840 13x9844 or 8x9840 26x9844 or 16x9840 53x9844 or 32x9840 ect connection to voice coil

R28 R29 R30

R31 R32

GR1 \*VL2 VL1 VL1

VB1

LA1

\* EL


T1	V3 616 51.0	,		
T2	V3 621 09.0			
C1 C2 C3 C4 C5	906/L15K 906/L15K 906/22K 906/22K 906/1K5	15000 pF 15000 pF 22000 pF 22000 pF 1500 pF	125 V 125 V 400 V 400 V	10 % 10 % 20 % 20 %
06 07 08 09 010	906/L15K 906/22K 906/L68K 906/68K 906/68K	15000 pF 22000 pF 68000 pF 68000 pF 68000 pF	125 V 400 V 125 V 125 V 400 V	10 % 20 % 10 % 20 % 20 %
C11 C12	906/22K 912/L25+25	22000 pF 25+25 μF	400 ₹ 300 ₹	20 %
U14	912/P50+50	50+50 μF	350 V	
016	910/F50	40 µF	50 V	
R1 R2 R3 R4 R5	49 501 43.0 49 501 43.0 915/£75\ +275\ 902/10\ 902/10\	2x0.5 MΩ 2x0.5 MΩ 0.35MΩ 10 MΩ 10 MΩ	log log log W	10 % 10 %
R6 R7 R8 R9 R10	902/4 <b>7K</b> 902/4 <b>7K</b> 902/100K 902/100K 902/270K	47000 Ω 47000 Ω 100 kΩ 100 kΩ 270 kΩ	W W W W W W W	10 % 10 % 10 % 10 %
R11 R12 R13 R14 R15	902/270K 902/10M 902/100K 902/470K 901/110E	270 kΩ 10 MΩ 100 kΩ 470 kΩ 110 Ω	Tarlarlarlarlar	10 % 10 % 10 % 10 %
R16 R17 R18 R19 R20 R21 R22 R23 R24 R25	901/47K 902/120K 900/15K 901/47K 902/47K 902/1K 902/1K 902/1K 902/470K	47000 Ω 120 kΩ 15000 Ω 47000 Ω 47000 Ω 1000 Ω 1000 Ω 1000 Ω 470 kΩ 470 kΩ	Top-Ica - Ica-Ica-Ica-Ica-Ica-Ica-Ica-Ica-Ica-Ica-	5 % 10 % 10 % 10 % 10 % 10 % 10 % 10 % 1
R26 R27	900/10K 901/6K8	10000 Ω 6800 Ω	1 W 글 W	10 %

 
10 10 20 20 20	あるかかかか
10 20 10 20 20	ちゅうちゃん
20	%


R28 R29 R30	902/39E 902/10E 902/10E	39 Ω 10 Ω 10 Ω	in W In W W W W	10 % 10 %)par. 10 %)
R31 R32	901/1K8 902/47K	1800 Ω 47000 Ω	<u>1</u> W 1 W 보고 W	5 % 10 %
GR1 *VL2 VL1 VL1 VB1	SR 250 B100 974/V500 974/V1000 974/V500 V3 693 22	113-145 ¥ 200-245 ¥	0.5 A	2 par.
LA1	8008 N			

\* EL 6400/06


10 % 5 %

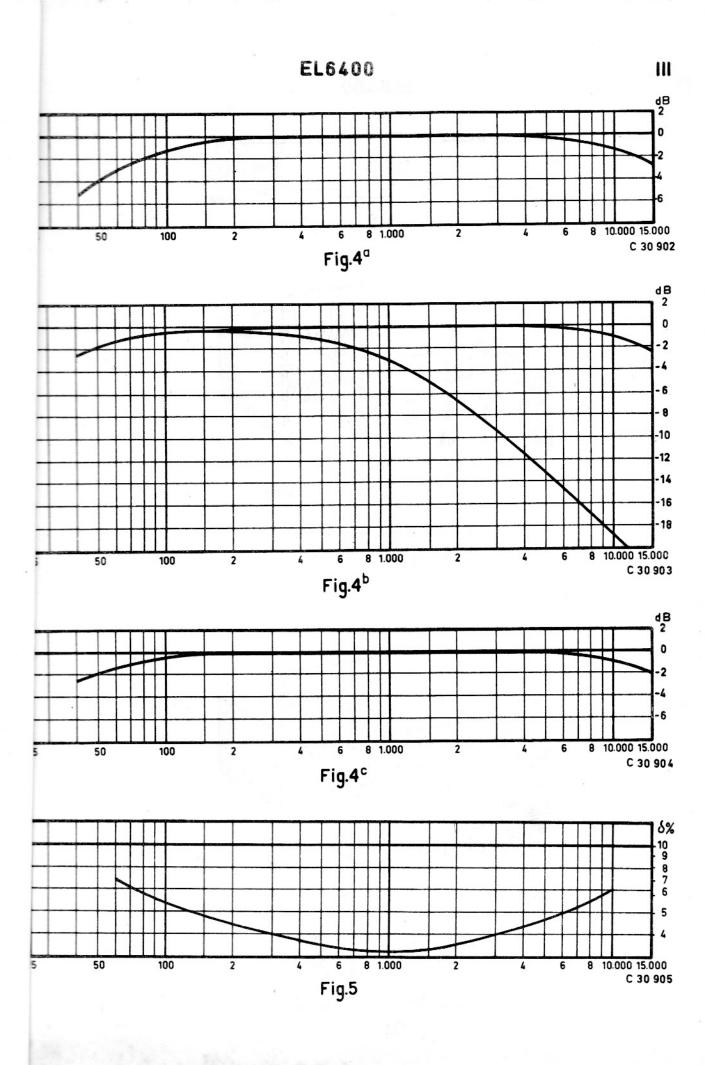



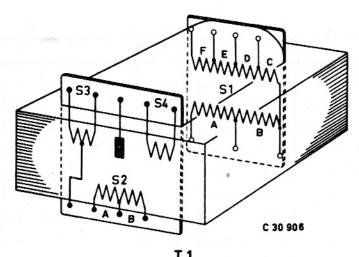

S1A-276	S2A - 288		
B- 38	B - 288		
C - 505 D - 138 E - 50	S3A - 8.5 B - 8.5		
F- 62	S4 - 100		

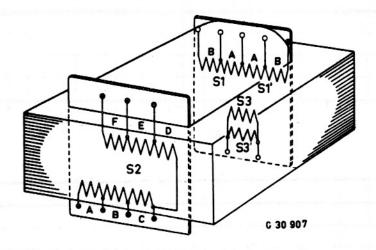

	2
S1A - 425 B - 425 S1A - 425 B - 425	S2A - 64 B - 96 C - 64 D - 96
S3 - 60	E - 128 F - 192

Fig.7