



THE THREE SEGMENTS OF EACH SWITCH SECTION ARE SHOWN IN B.C. POSITION. ROTATE 30° TO LEFT FOR MEDIUM BAND, AND 60° TO LEFT FOR SHORT WAVE BAND.