

STANNAGE RADIO

SERVICE DATA

for

MODEL 510

DUAL WAVE SUPERHETERODYNE

FOR A.C. OPERATION

TABLE OF VOLTAGES AND CURRENTS

Valve	Function of Valve	Ef	Ep	Ip	Esg	Isg	Eg	Eag	Iag
EK2	Frequency Converter	6	250	3	85	2	2	200	3
6U7G	Inter-mediate Frequency Amplifier	6	250	7	85	1	2	—	—
6G8G	2nd Det. A.V.C. 1st Audio	6	100	.6	40	.1	2	—	—
6V6G	Output	6	230	40	250	2	14	—	—
5Z4G	Full Wave Rectifier	5	340/340	28/28	—	—	—	—	—
6E5	Visual Tuning Indicator	6	40	.2	—	—	—	—	—


SPEAKER FIELD RESISTANCE, 2000 OHMS.

EARTH
TERMINAL.

SPEAKER
SOCKET

POWER
CORD

AERIAL
LEAD

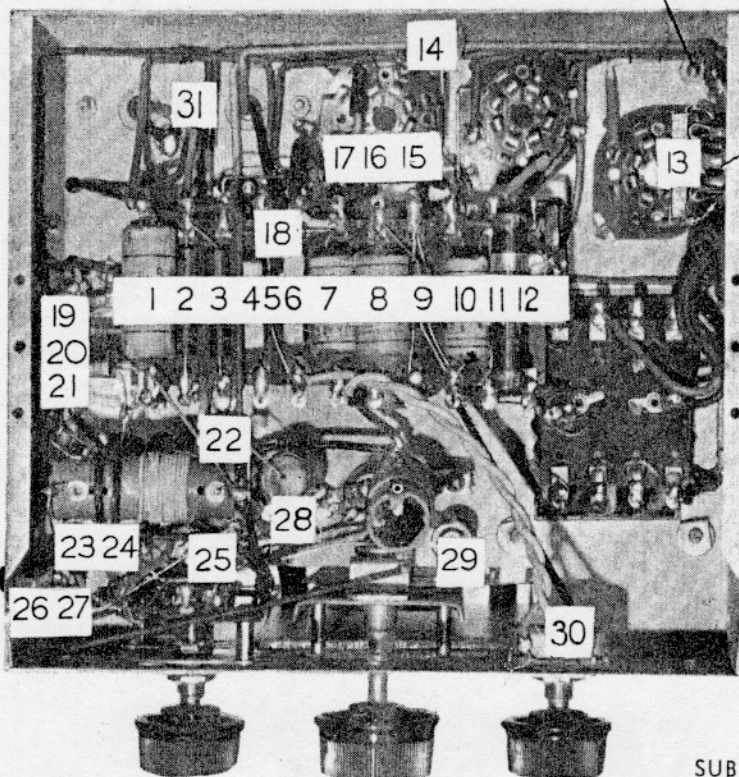


SUB CHASSIS VIEW

WAVE CHANGE SWITCH TUNING CONTROL VOLUME CONTROL

LOCATION OF COMPONENTS:

The key on circuit diagram is numbered to correspond to the numbers on photograph of sub-chassis view.

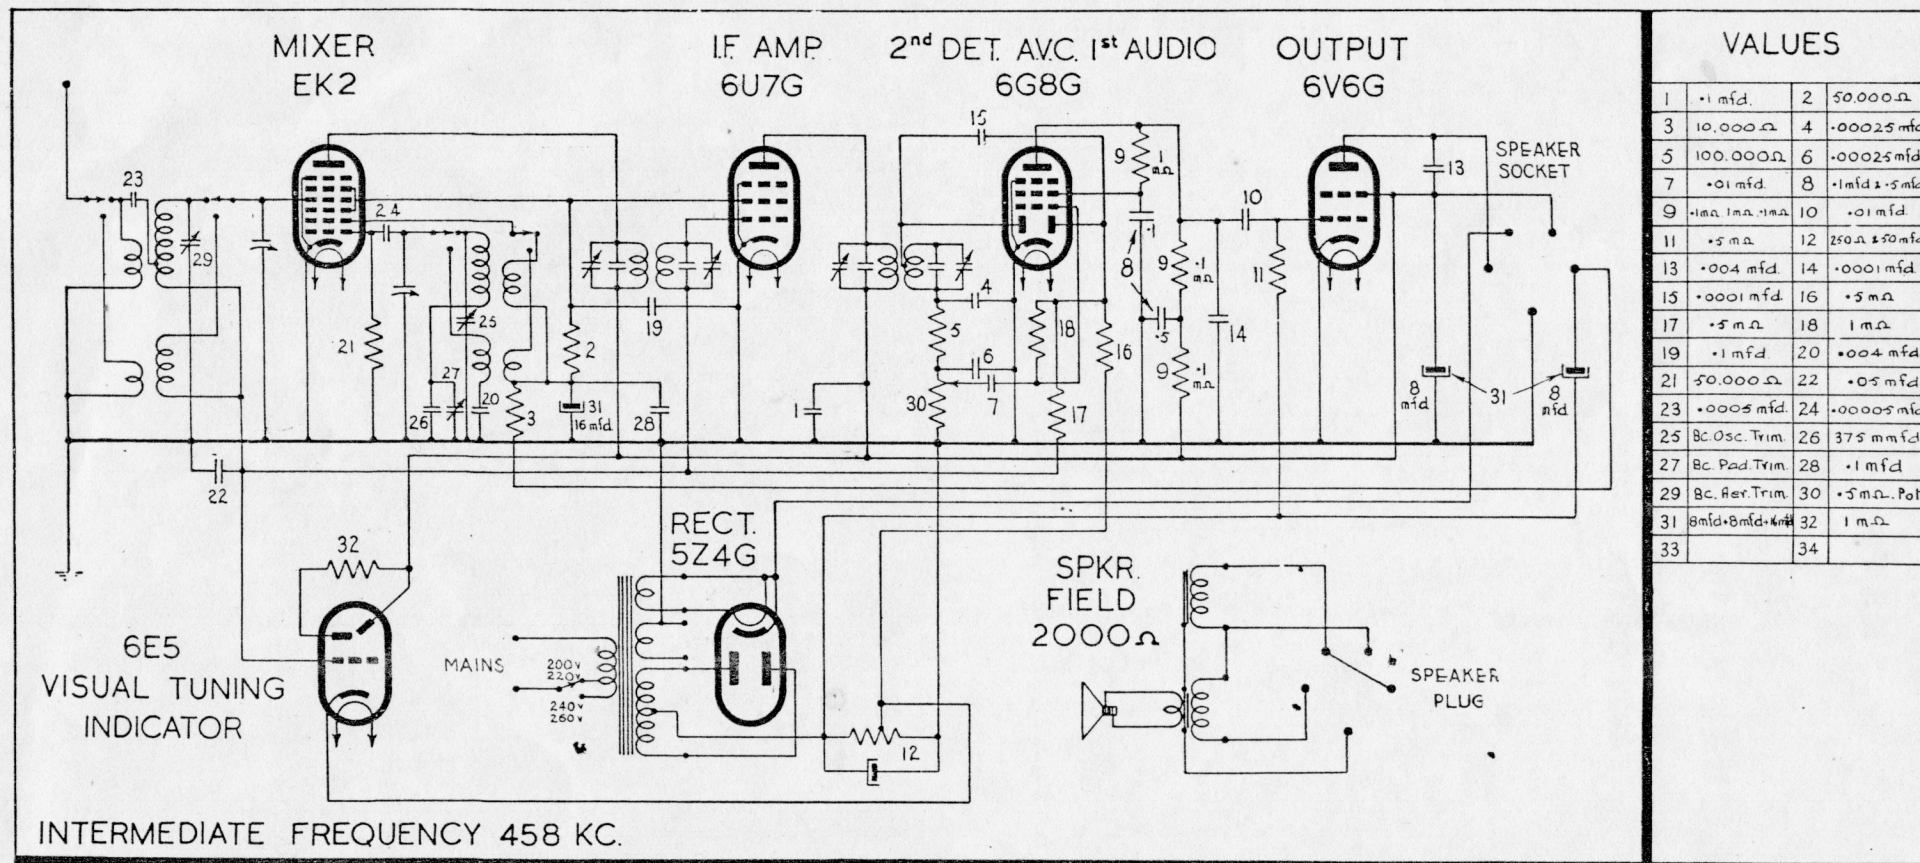

STANNAGE RADIO MODEL 510

DUAL WAVE SUPERHETERODYNE FOR A.C. OPERATION