



7 TAW

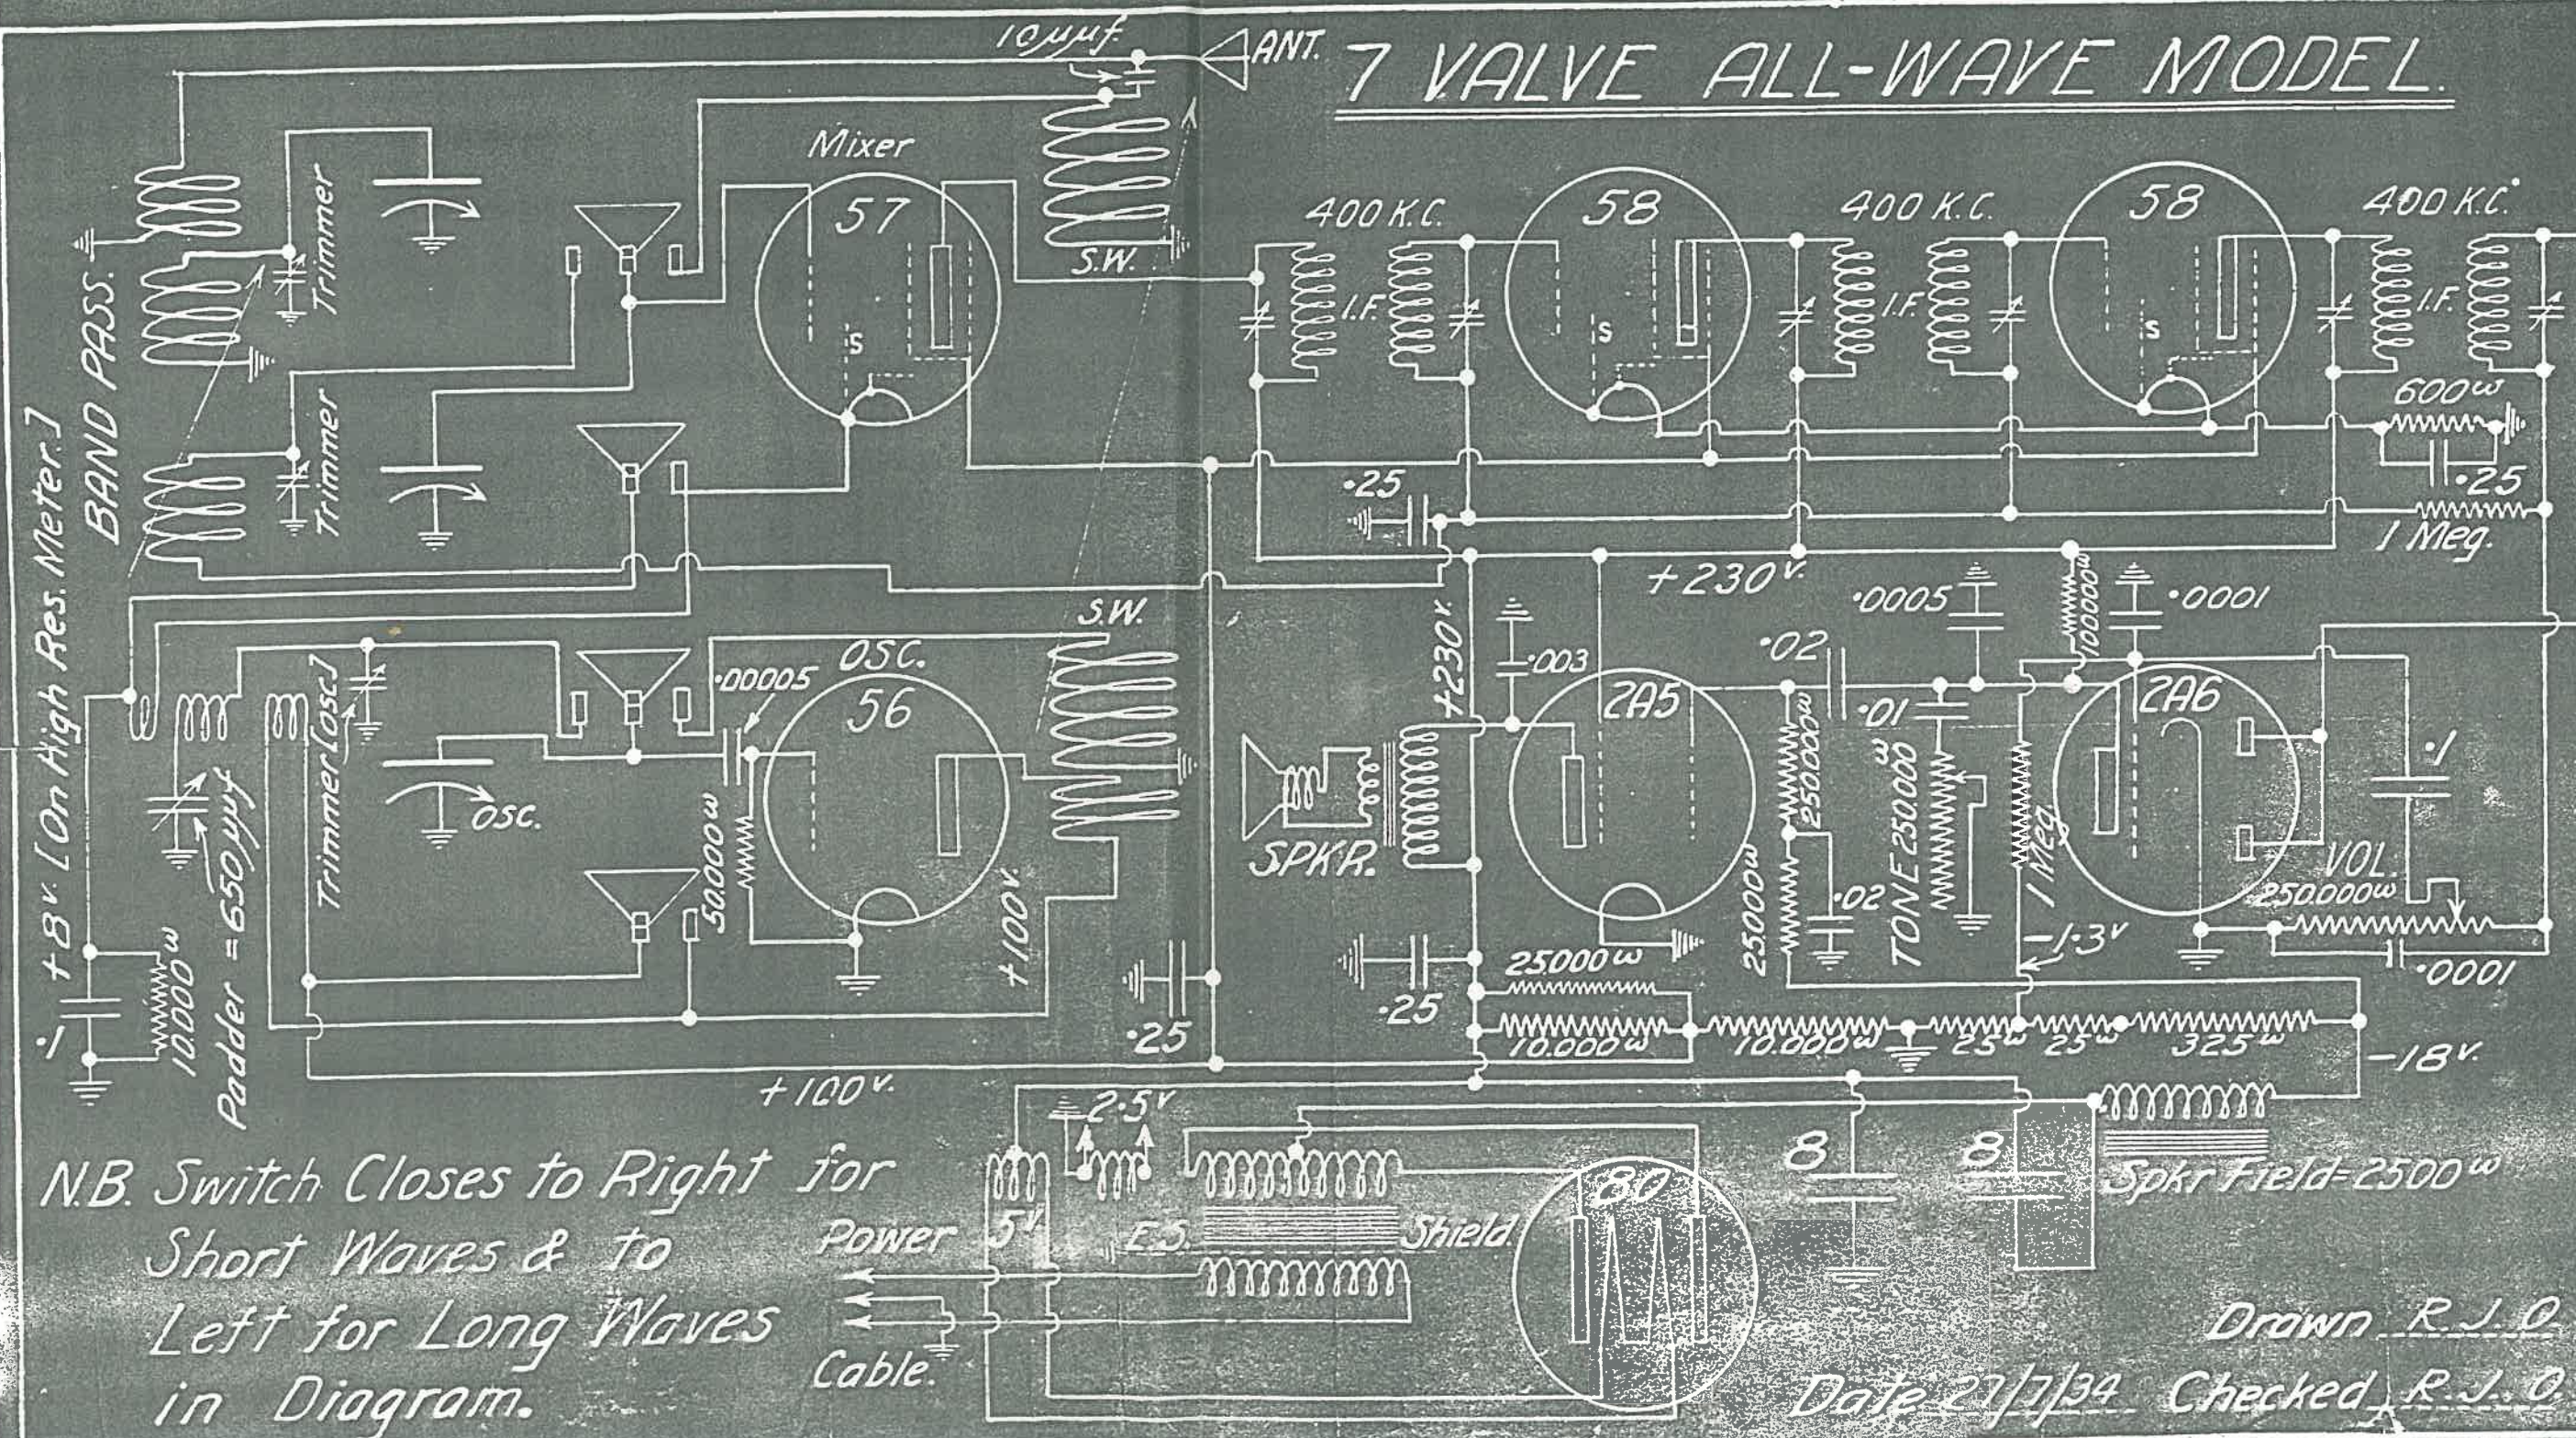


UP TO Serial # 15421

7 VALVE ALL-WAVE MODEL.

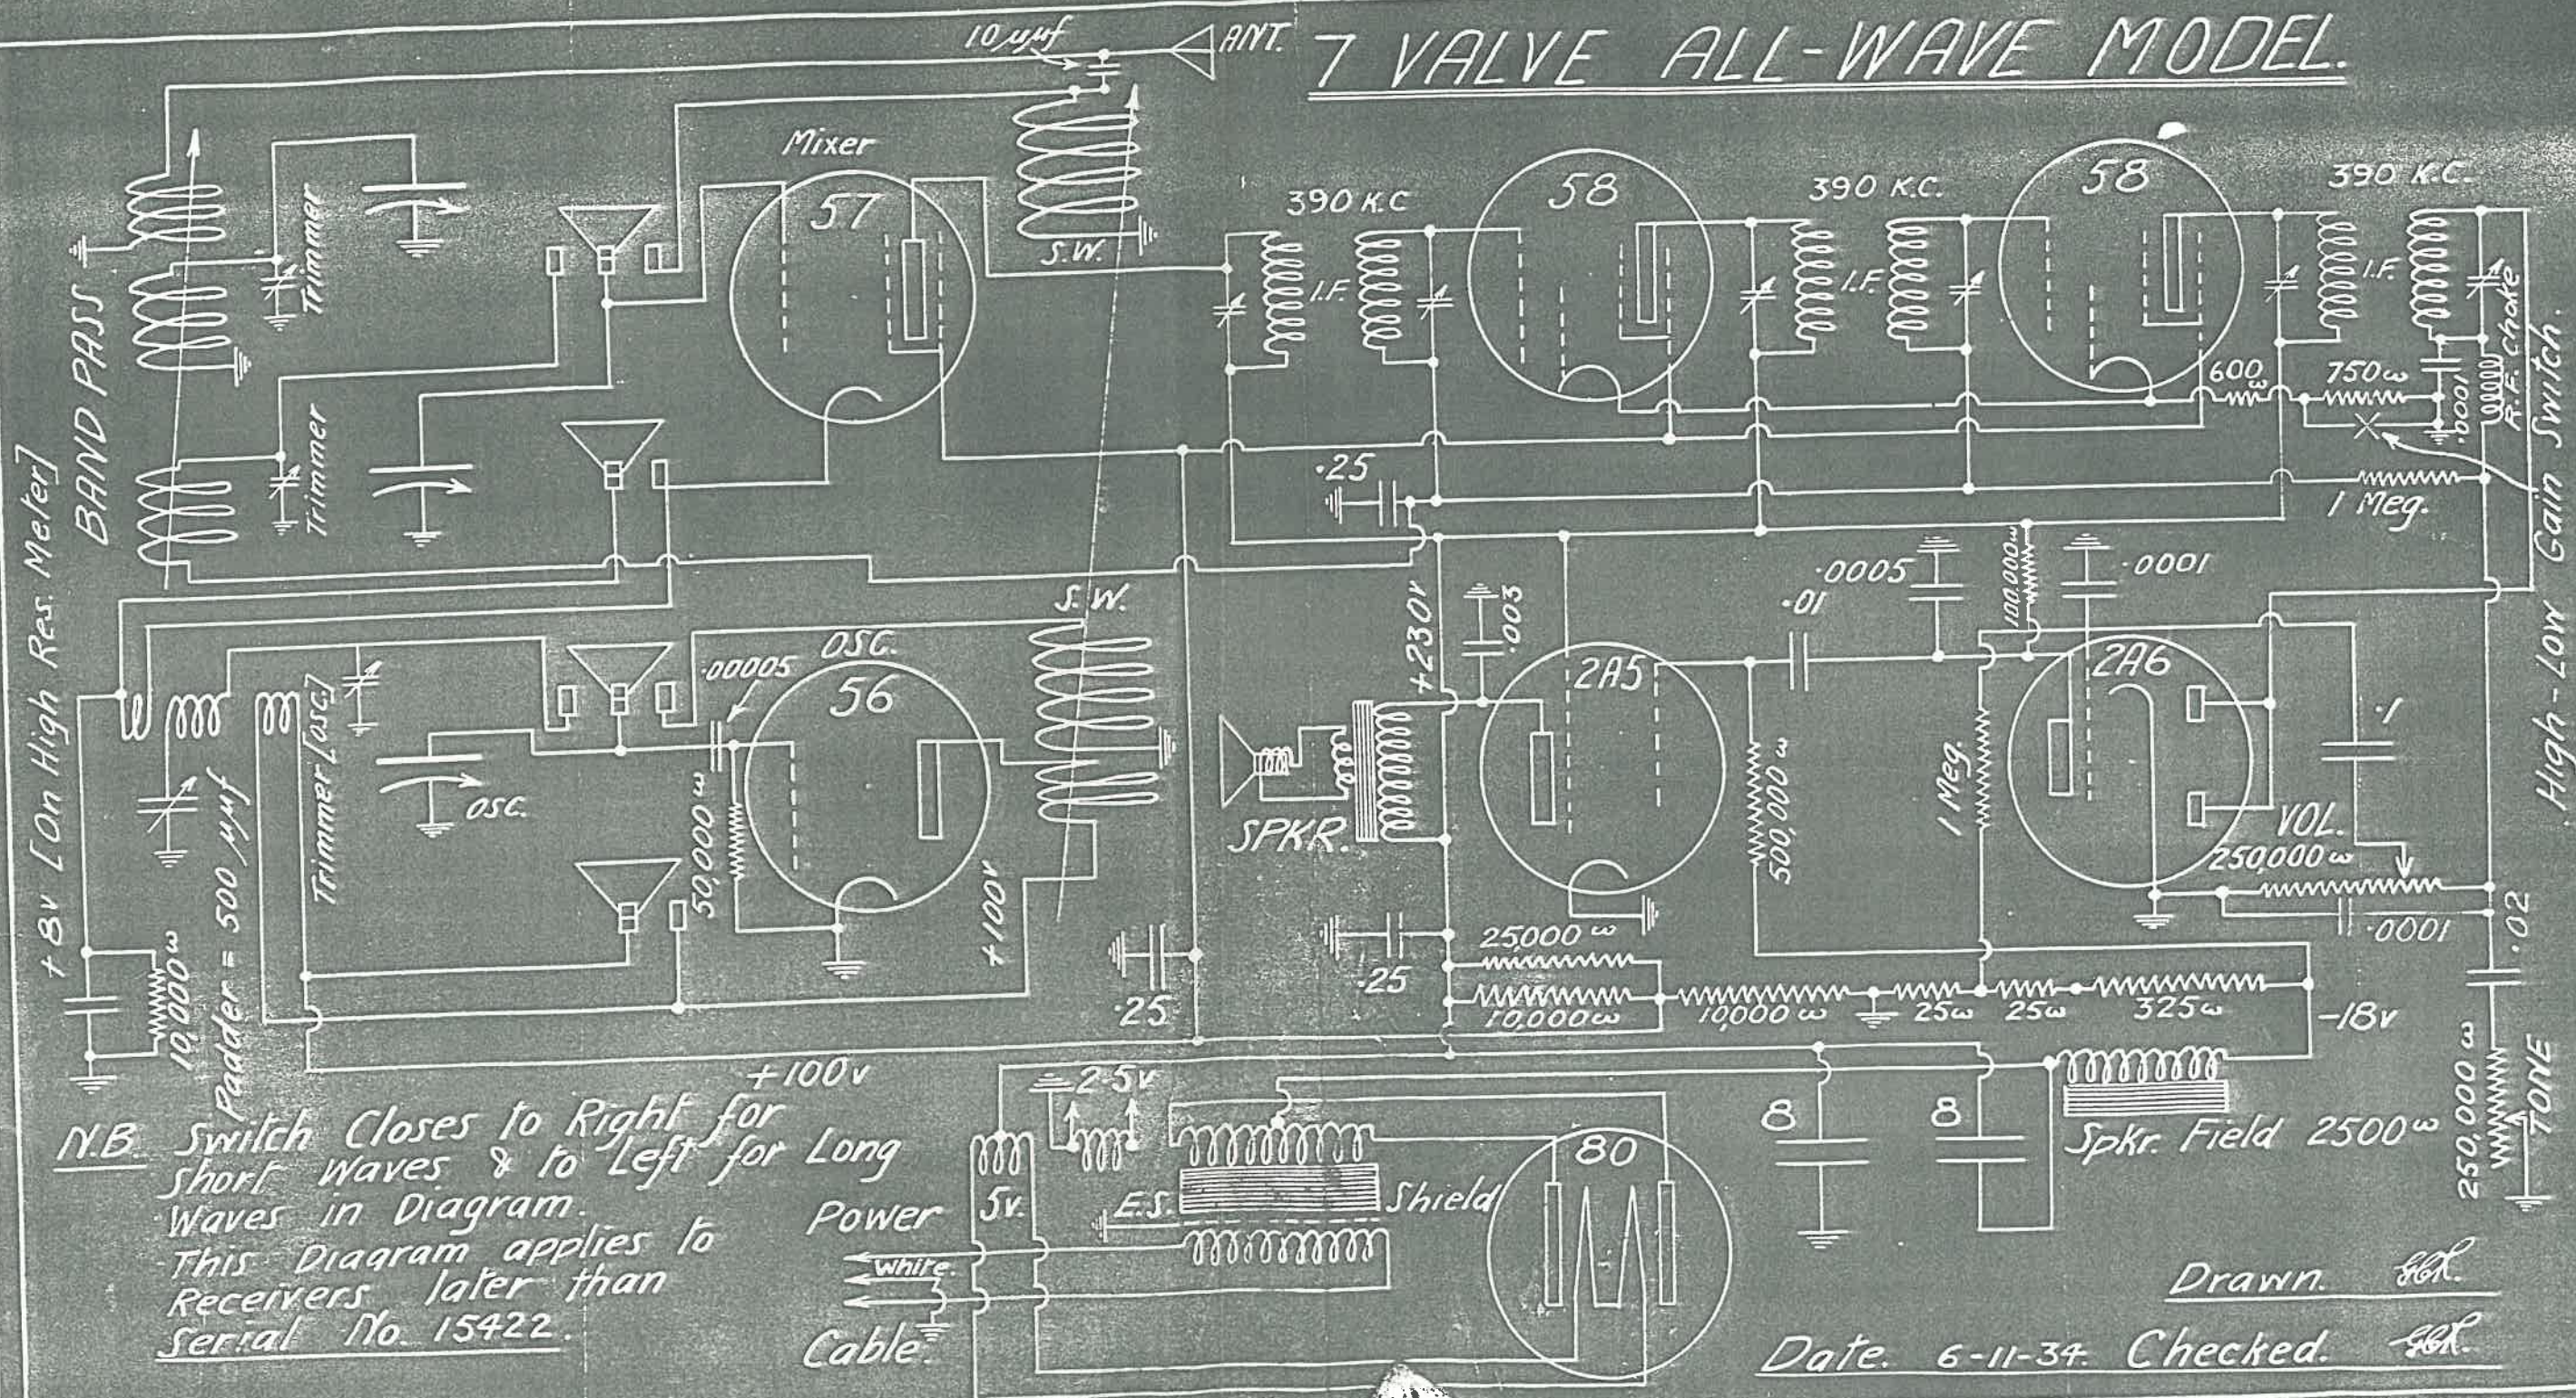

I.F. assembly next to
2A6 valve.

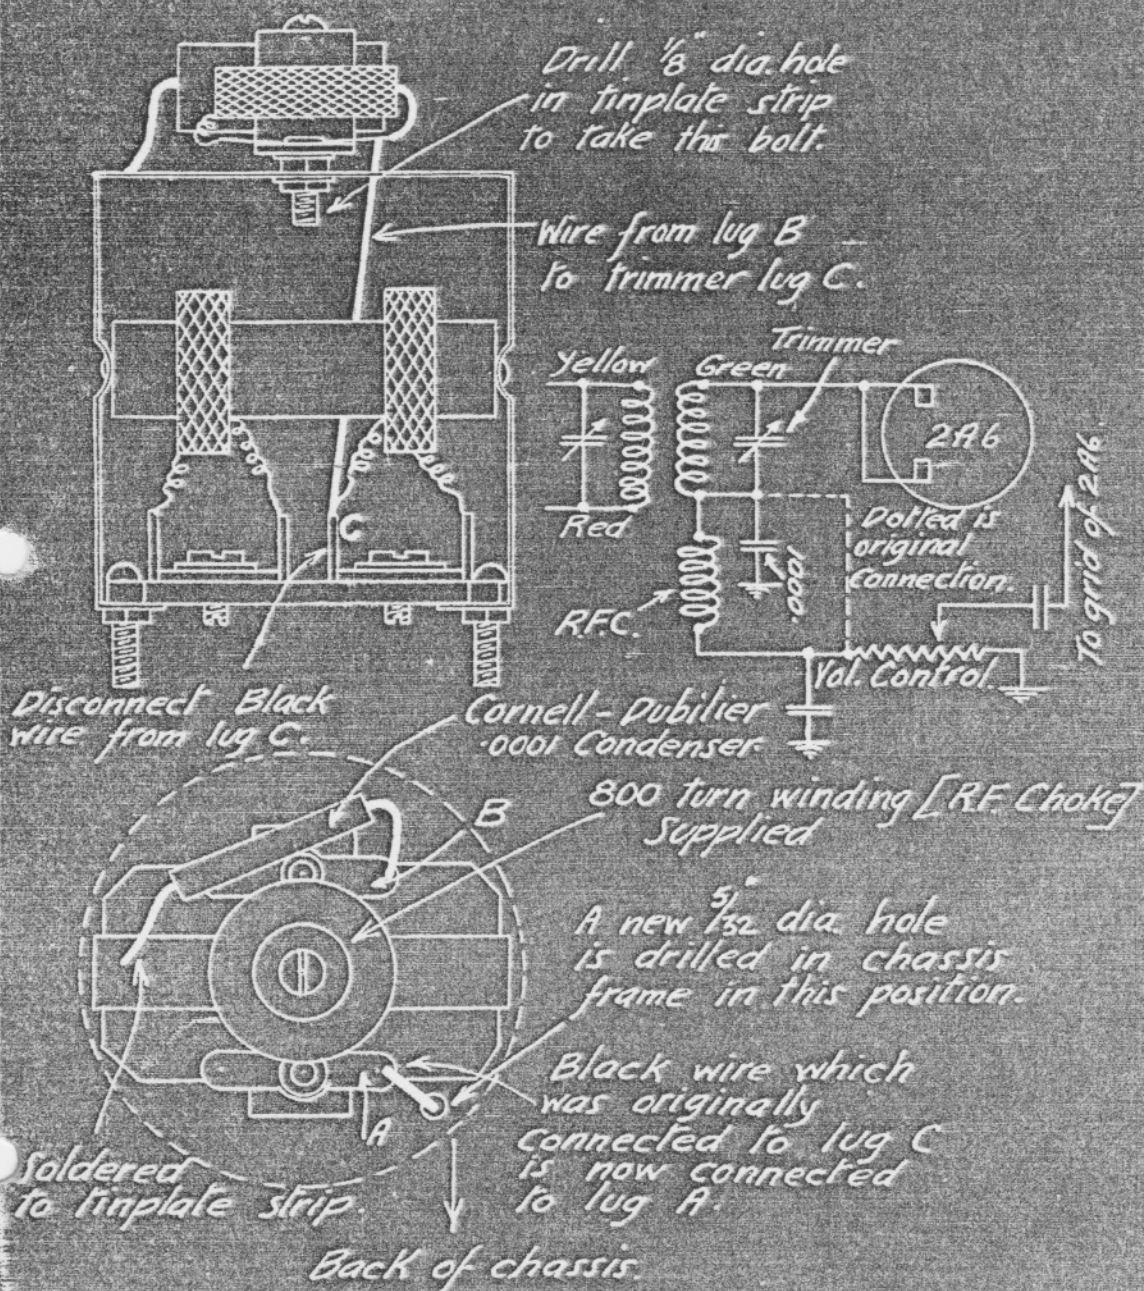

When drilling hole in tinplate strip be sure that the filings do not get between the trimmer plates. In addition to fitting the R.F. Choke and condenser it is advisable to shorten the yellow plate wire of the 2A6 valve so that it becomes almost stretched between the lug on the socket and the anchor point to which the 100,000 ω plate resistor is connected. The yellow wire should not be closer than $\frac{1}{2}$ " to from the green wire and the diode plate lugs on the socket.

3-10-34

DIAGRAM OF IMPROVEMENT TO TAW